

Arco Clip Hook (mk.5) bow accessory

The bow-holding hook lies flush to the clip for belt/waistband use and notches to 90° for music stand use.



The Fine Side

This side of the clip has a smooth face as it is uppermost in the print process

The Funky Side

This side has some odd markings due to being in contact with the print plate.

Take care when using it in belt mode – remember to take it off before sitting down, to avoid breaking the hook.

In music stand ledge mode, the rubber grip lining helps keep the clip securely in place.